


SD-45 WEIGHTS

This locomotive has been delivered with two of the fuel tank weights stored in the foam packaging in order to minimize damage during shipping. If it is desired to add these weights to the locomotive, follow the directions below:

1. Remove the weights from the packaging.
2. Remove the long hood of the locomotive by removing the six screws that hold it in place. Turn the locomotive on it's top and remove the screws from the bottom of the chassis. Refer to the diagram below for the location of these screws.
3. After removing the screws, place the locomotive on its wheels again. Pull up on the long hood to remove it and detach the modular plugs that tether the hood to the chassis.
4. Detach the fuel tank by **gently** pressing the four tabs holding the tank to the chassis.
5. Using the long screws, nuts and washers provided, attach the weights to the chassis and reassemble the locomotive.

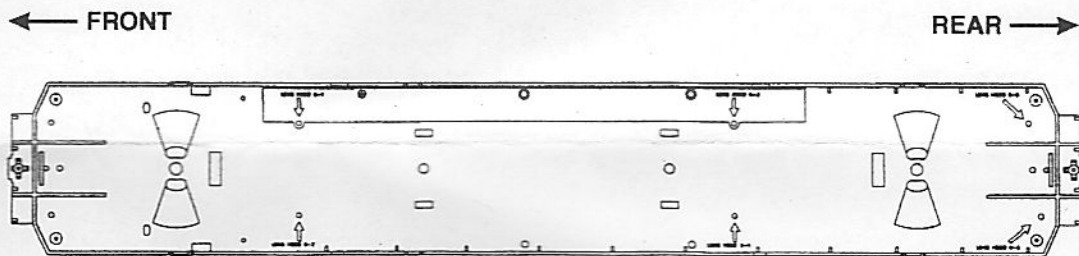

Bottom of Chassis
Location of screws (small arrows) securing
the cab and long hood.



ARISTO-CRAFT TRAINS / Polk's Modelcraft Hobbies, Inc.
698 South 21st Street, Irvington, NJ 07111 USA
Tel: (973) 351-9800 Fax: (973) 351-9700
e-mail: aristo@mindspring.com

Printed in China